

## Liebherr 1070 Service Schedule

Date: 24-5-24 Rego: YKT07P Plant ID: 700

Make	Liebherr	Model	1070
Service Type	250hr	Serial No:	043136
Service Hrs.	15,250hr	KM	
Next Service	15,500hr	Due (+/- 50Hr. Reading) / 5210	

Status type: Satisfactory ✓ Action Required ≭ Not Applicable NA Description Status **Action/ Comments** 250hr Service CARRIER / CHASSIS **Operators Cabin** Panel Condition Cabin Condition Gauges Horn Lights & Indicators Locks/Doors/Mirrors Windows & Wipers Air Conditioning Heater & Demister Registration Valid & In Date Hydraulic System Replace bleeder filter of hydraulic tank MA Return filter MA Replace oil filter insert 14 Hydraulic Hoge Lines Check hoses for leaks and damage Steering Check that steering gear and tie rods are firmly attached, check cotter pin Check axle alignment, readjust, if necessary Check hydraulic hoses & steering system for leaks and damage Hydraulic Supports Check ease of movement of sliding beams / grease Check sliding beam cables Axle Suspension Function test as blocking cylinder **Automatic Trapsmission** Check or tighten mounting screw



## Liebherr 1070 Service Schedule

Drop Box					
Check attachment					
Transfer Gear Box					
Check or tighten mounting screw					
Pump Distribution Gearbox					
Ob - als attachment					
Drive Shaft Between the Engine and	Gearbox or	r Gearbox and Transfer Gearbox			
Check resistance or play in joint by manually bending it after removal	NA	(100,000 km)			
Check length compensation for inadmissible bending play after removal. Replace the drive shaft if the bending play exceeds 0.17mm	NA	(100,000 km)			
Ax	le, Driven				
Oil level checks at axle housing, differential housing and wheel hubs	1				
Check attachment					
Axie	, Non-drive	en			
Check attachment					
Fuel System					
Check fuel preliminary filter, drain off water if necessary					
Tyres					
Ensure that wheel nuts are tight, re-tighten if necessary					
Brake system					
Check brake lining thickness	/				
Adjust brakes if necessary, replace linings if necessary	/				
Check the brake discs	/				
Check the brake drums	NA				
Ор	erator's Cal	ab			
Grease boom support					

	SUPERSTRUCTURE	
and the political flowing flow a Section 1990 and the section 1990 and t	Rotary Connection	
Lubricate gearing		
	Drive Shafts	
Check flange bolts	1/	
Lubricate	/	
	Ballasting	
Lubricate bearing	/	
Eddinate Daming	Press on Pulleys of Çable winches	
Grease guides		
Grease guidee	Crane Ropes	
Check, grease if necessary		
Check, grease in hecessary	Hydraulic Hose Lines	
Check for safe condition		



## Liebherr 1070 Service Schedule

Pneumatic Boom Lock			
Clean air filter with compresses air			
	Safety Group		
LMI operational			
Anti-two block operational		3	
Boom length & angle indicators	1,		
Manual boom length & angle indicators			
Level indicators			
Emergency controls (E-Stops)			
Operation & safety manuals			
2 way radios condition / operation			

OTH	ER NOTES:
*	charging unit faulty for BTT - Parts ordered

Completed by:	Christian. C	Mechanic / Fitter	24-5-24
	Name	Position	Date
	Shelder J		24-5-24
	Name	Position	Date